

Spare parts suitable for:
SILANOS

 


Toasters




Item	Order	Description	Model	OEM
1	416020	quartz tube, 390mm	3A, 6A	907380
2	416034	1000 W/230 V		905631
3	350032	timer, 15 min		907055
4	110527	knob		903940

Contact grills

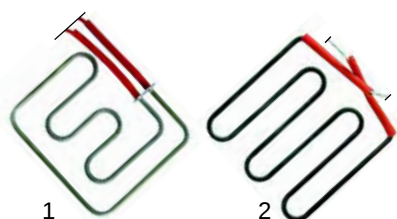

Item	Order	Description	Model	OEM
1	416178	750 W/230 V (upper)	Größe 1, Größe 2	905650
2	416179	1000 W/230 V (lower)		905671 905670

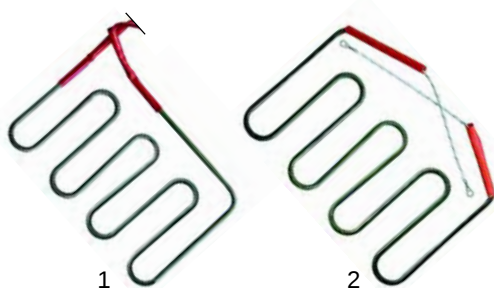 


Item	Order	Description	Model	OEM
1	416181	1200 W/230 V (upper)	Größe 1,5	905615
2	416182	1400 W/230 V (lower)		905635




Item	Order	Description	Model	OEM
1	359034	signal lamp, 400 V, 10mm Ø	universal	903640
2	359019	signal lamp, 400 V, 10mm Ø		903641
3	345598	signal lamp, 400 V, 9mm Ø		903629
4	no longer available	switch		905341
5	301003	switch		903613



Item	Order	Description	Model	OEM
1	375294	safety thermostat	universal	907101
2	300129	switch		901727
3	110527	knob		903973

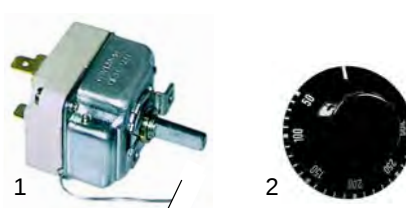 


Item	Order	Description	Model	OEM
1	375002	thermostat	universal	907132
2	110528	knob		903970

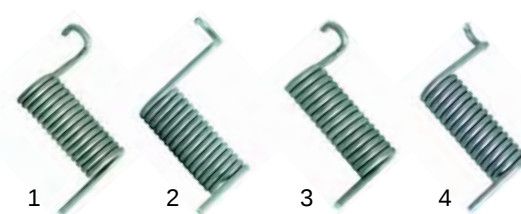 


Item	Order	Description	Model	OEM
1	700172	spring (right)	Größe 1, Größe 2	904080
2	700173	spring (left)		904081
3	700174	spring (right)	Größe 1,5	904100
4	700175	spring (left)		904101

 
Roller grills

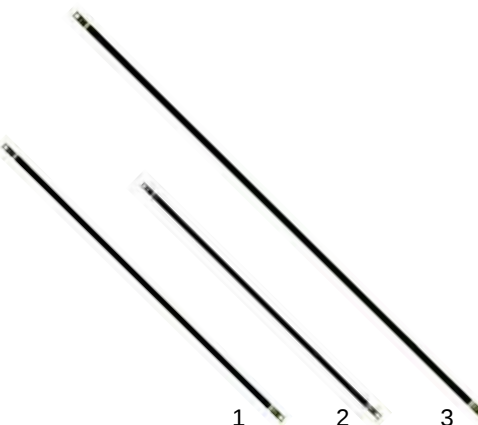

Item	Order	Description	Model	OEM
1	416183	170 W/230 V	Rolly 5, Rolly 16	905710
2	416184	170 W/230 V		905712
3	416185	170 W/230 V	Rolly 8L	905711

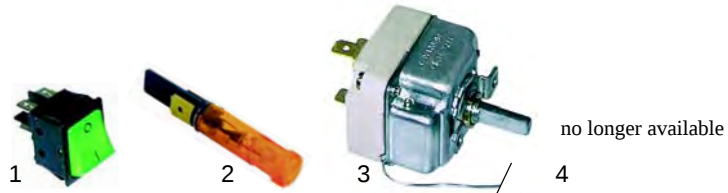 


Item	Order	Description	Model	OEM
1	301003	switch	Rolly 5, Rolly 5S, Rolly 8L, Rolly16	903610
2	345598	signal lamp, 400 V		903629
3	375002	thermostat		907130
4	110529	knob		903380

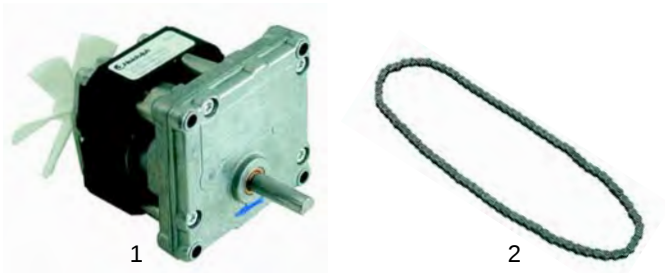 


Item	Order	Description	Model	OEM
1	500497	motor	Rolly 5/5S,	904191
2	693056	drive chain	Rolly8L/16	901118

 Vitrines

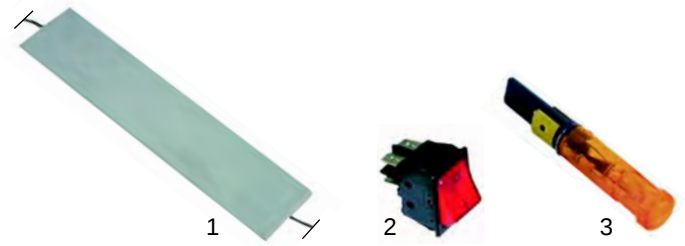

Item	Order	Description	Model	OEM
1	416186	350W/230 V	R701L,	905822
2	301001	switch	R502L,	903612
3	345598	signal lamp, 400 V	R902L	903629

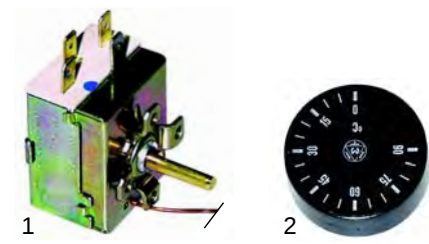 

Item	Order	Description	Model	OEM
1	390006	thermostat	R701L, R502L,	907110
2	110100	knob	R902L	903982